



# ABACO MACHINES USA

MATERIAL HANDLING SOLUTIONS

## SVL Troubleshooting:

### Adjust the Air Release Valve on the Tilt Control

**ISSUE:** SVL does not hold its position when in Full Vertical Position

**WORKAROUND:** Adjust the Air Release Valve on the Tilt Control



#### STEPS:

- 1) adjust the Air Release Valves on the side of the Tilt Control / Joy Stick. This controls the speed of the up and down.
- 2) Please adjust the dial on the left (as shown in picture).
- 3) Notice there is a locking nut to set the final position. Unlock the nut then adjust the dial all the way in by turning the knob clockwise.
- 4) Test, then back out the dial some to see result.
- 5) Ideal setting is prob is at 50% position, but you will need to play with it some to find best operation location for your machine and load.