



ABACO MACHINES USA
MATERIAL HANDLING SOLUTIONS

Removing Center Plate on ABACO LIFTER



1st step

Start by mounting the lifter onto a secure bar or table where it won't move or fall.

1a. Remove the 4 counter sink cap screws and removing the back plate.



2nd step

Once the back plate is off set it to the side and remove the (4) screws on the center plate.



3rd Step



Remove the two counter sink screws on the side of the center plate that are attached to the linker arms.

Once the center plate is completely removed, clean the back side of the center plate for dust and grease, so that your lifting pin can move without any issue. Maintaining your lifter free of dirty and grime will extend the life time of your lifter and its parts.